



BLISS ANAND

Instrument Chambers





Instrument Chambers

Index:


Introduction	02-03
Selection Guide	04-05
Special Requirements & Testing	07
Notes	08



Introduction to Bliss Instrument Chambers

Also known as a cage, it houses the liquid process being measured and instrument's sensing element. There are many types of process connections on the body of the chamber which allow mounting to the vessel.

Figure below show the most common configurations.

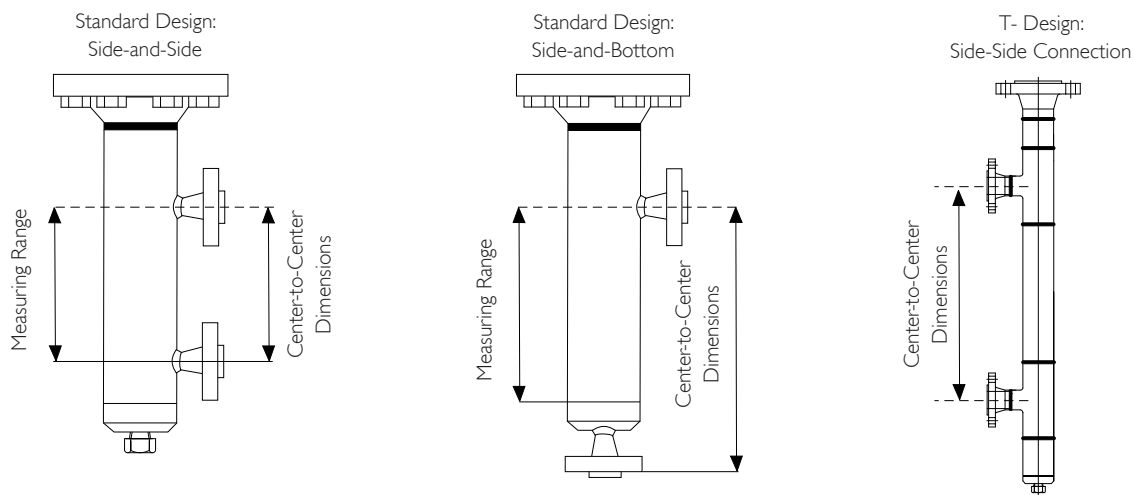

This configuration allows an instrument to be isolated with valves for maintenance without disturbing plant operation. It is also useful for in-tank restrictions that do not allow mounting of the instrument in a vessel. This approach offers many advantages when solving application challenges. The instrument is mounted on top of the chamber with the flanged or threaded instrument connection. A thread version is available for the vertical float level switch.

■ When ordering, specify the center-to-center dimension in feet and inches, or meters and millimeters.

INSTRUMENT CHAMBER SELECTION GUIDE BAC 92 SERIES

Selection	Suffix Codes												Description	
A Instrument Type	G													GWR
	V													Vertical Level Switch
	H													Horizontal Level Switch
B Mounting Style	SS													Side-Side
	SB													Side-Bottom
	XX													Special (Specify)
C Chamber Material	CS													A106 Gr. B
	LF													A333
	S2													SS-316 / 316 L
	S8													Inconel 825
	XX													Special (Specify)
D Instrument Chamber Size				2										2"
				3										3"
				4										4"
				X										Special (Specify)
E Instrument Chamber Pipe Schedule				A										Sch. 10
				B										Sch. 40
				C										Sch. 80
				D										Sch. 160
				X										Special (Specify)
F Instrument Connection Size (Flanged)					2									2"
					3									3"
					4									4"
					X									Special (Specify)
G Instrument Connection Rating (Flanged)					A									150#
					B									300#
					C									600#
					D									900#
					E									1500#
					F									2500#
					X									Special (Specify)
H Instrument Connection Finish (Flanged)					RF									RF
					WN									WNRF
					SJ									SORTJ
					WJ									WNRTJ
					XX									Special (Specify)
I Chamber Bottom Style					D									Dished End
					B									Bottom cover
					X									Special
J Process Connection Size										1				1/2"
										2				3/4"
										3				1"
										4				1.5"
										5				2"
										6				2.5"
										7				3"
										8				4"
										X				
K Process Connection Rating										A				150#
										B				300#
										C				600#
										D				900#
										E				1500#
										F				2500#
										T				NPT(F) - 3000#
										X				
L Process Connection Type										TH				Threaded
										RF				RF
										WN				WNRF
										SJ				SORTJ
										WJ				WNRTJ
										XX				

INSTRUMENT CHAMBER SELECTION GUIDE BAC 92 SERIES

Selection	Suffix Codes	Description	
M	Vent Connectio	PL	Plugged
		FL	Flanged
		FV	Flanged with Valve
		SV	Screwed with Valve
		XX	Special
N	Vent Connection Size	1	1/2"
		2	3/4"
		3	1"
		X	Special (Specify)
O	Vent Connection Rating	A	150#
		B	300#
		C	600#
		D	900#
		E	1500#
		F	2500#
		T	NPT(F) - 3000#
P	Vent Connection Type	X	Special (Specify)
		TH	Threaded
		RF	RF
		WN	WNRF
		SJ	SORTJ
		WJ	WNRTJ
Q	Drain Connection	XX	Special (Specify)
		PL	Plugged
		FL	Flanged
		FV	Flanged with Valve
		SV	Screwed with Valve
R	Drain Connection Size	XX	Special
		1	1/2"
		2	3/4"
		3	1"
S	Drain Connection Rating	X	Special (Specify)
		A	150#
		B	300#
		C	600#
		D	900#
		E	1500#
		F	2500#
T	Drain Connection Rating	T	NPT(F) - 3000#
		X	Special (Specify)
	Drain Connection Type	TH	Threaded
		RF	RF
		WN	WNRF
		SJ	SORTJ
U	Drain Connection Type	WJ	WNRTJ
		XX	Special (Specify)
	Mounting Accessories	OO	No Accessories
		SN	Studs & Nuts
V	C to C or C to B Distance	GS	Gasket Spiral Wound
		GF	Gasket Flat (Gra.)
		GX	Gasket Special
		XXXX	Specify with unit



INSTRUMENT CHAMBERS

BLISS ANAND Instrument Chambers

- * Allows external mounting of process level instrumentation
- * Ideal for critical area and general purpose applications
- * Power, Petro-Chemical, Refining, Oil & Gas, Chemical and Process Steam
- * 38 years of experience in designing and manufacturing chambers in accordance with international codes
- * Variety of process connections and optional drain and vent connections
- * Used by major industries worldwide
- * Enables live maintenance
- * Designed to ASME B31.3
- * Pressure Equipment Directive (PED) compliant
- * Custom designs service available
- * For use in applications up to ASME B16.5 Class 2500 and EN1092 PN250
- * Available in carbon steel, stainless steel and other alloys

Chamber Design

The Bliss instrument chamber is designed to the ASME B31.3 standard, and is Pressure Equipment Directive (PED) compliant. Weld neck flanges and full penetration welds in accordance with EN ISO 15614-1:2004 and ASME Boiler and pressure Vessel Code Section IX are used throughout. All welders are qualified to EN 287-1:2004 and ASME Boiler and pressure Vessel code section IX. All construction materials have full traceability in accordance with the EN 10204 type 3.1 certificates. Every chamber is hydro-tested as standard. There are two designs available: the Standard Design and T-piece Design.

Standard Design

With the standard design, the process connections are welded directly onto the chamber body. This keeps the number of welds to a minimum for increased Safety.

Pressure ratings up to and including ASME B16.5 Class 2500.

T-Piece Design

T-Piece design is used, Unequal T's are used so the larger process connections can fit on the smaller chamber body.

Pressure ratings of up to and including ASME B16.5 Class 2500.

Drain and Vent (Optional)

A drain allows liquid to be drained away and allows maintenance of the instrument. It is always specified for a side-and-side chamber. A vent is optional and allows gas in the upper zone above the liquid to be vented off. Both the drain and vent are available as threaded or flanged in a variety of sizes. Special types are also available upon request.



Special Requirements & Testing

- H2 Compliance
- PMI
- D.P. Test
- Radiography
- Ultra Sonic
- Approved Weld Procedures & Welder Certifications
- Nace Compliance
- HIC Compliance
- SP. Alloy Weldings (Alloy 825, StSt, Monel, LF2 etc.)
- Other testing available as required



BLISS ANAND

Manufacturing Locations:

UNITED STATES OF AMERICA

202 Industrial Blvd #804,
Sugar Land, TX 77478, USA
Ph.: +1 (281) 891-9614
Fax: +1 (281) 542-7000
e-mail: sales@blissamericas.com

UNITED ARAB EMIRATES

P.O. Box: 18576, S40412A,
Jebel Ali Free Zone South,
Dubai, U.A.E.
Ph.: 00971-4-883 56 33
Fax: 00971-4-883 56 44
e-mail: reception.gesme@blissanand.com

INDIA

Plot No. 240, Sector-3,
Growth Center, HSIIDC,
Bawal, Haryana, India
Ph.: +91 (1284) 269400-99
Fax: +91 124 2290884
e-mail: sales@blissanand.com

THE NETHERLANDS

Tijvoortsebaan 8Q,
5051 HJ Goirle,
The Netherlands
Ph.: +31 (0) 13 304 0111
e-mail: sales@blisseurope.eu

KINGDOM OF SAUDI ARABIA

Production Unit #101, B-2,
Cluster 2, Modon Industrial City 3,
Zip code -34847, KSA-Dammam
Phone: +966 (0) 56 678 4945
e-mail: ksa@blissanandusa.com



UNITED STATES OF AMERICA | UNITED ARAB EMIRATES
INDIA | THE NETHERLANDS | KINGDOM OF SAUDI ARABIA

www.blissanand.com